

# iCOCON



**Relaxation Chair** 

HCP-ICO10000A HCP-ICO10000D HCP-ICO10000E

### **Installation Manual**

Thank you for purchasing the iCOCOON.
This is a high-end, furniture-style
relaxation chair that combines design
and medication with the goal of
promoting mind and body health.

# To those who conduct unpackaging and installation work


This document explains the work to be carried out after carrying-in of the product for installation. To work safely and accurately, be sure to follow the steps in this document. The box containing this document also contains the objects shown below. Confirm that none of them are missing. After installing the product, keep this manual safe and available for future reference.

#### Check of bundled items

Confirm that the following items are contained in the package.

This product comes as two package boxes: one for the main unit & top panel and the other for the footrest and side panels (left and right).

Confirm that the main unit and bundled items are not damaged or broken.

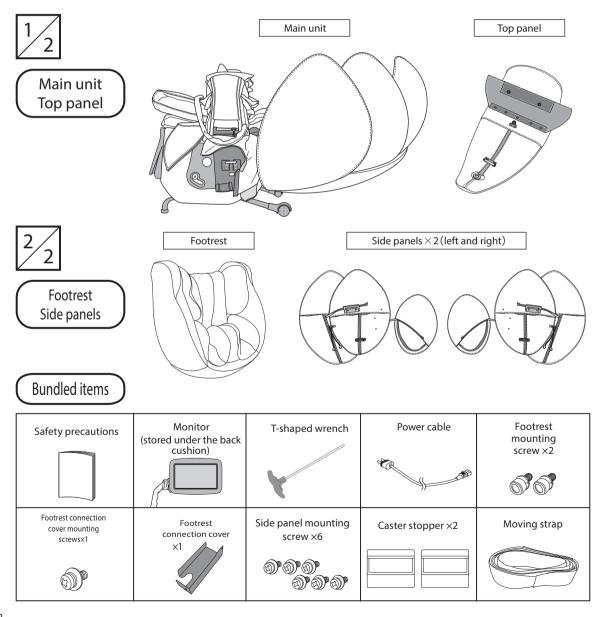

#### Installation steps

Install this product by following the steps below.

- 1. Move the main unit to the installation 2. Mounting the footrest.
- <sup>4</sup>. Mounting the side panels.


7. Turn on the power.

- 5. Attaching the monitor.
- 3. Mounting the top panel.6. Connecting the power cable.
- 8. Place the caster stoppers.
- •This product is heavy. Therefore, wear working gloves to prevent injury.
- •Installation of this product must be carried out by two or more persons.
- •when a product has been carried into a room from the cold outdoors, wait until the product has warmed up to room temperature (for one hour or longer) before staring the installation work.

#### Installation location

#### Checking installation location of the product

In order to prevent the product from making contact with a wall or other object, secure a clearance of 50 cm (19.7 inch) or more behind the product and a clearance of 50 cm (19.7 inch) or more in front of the product.

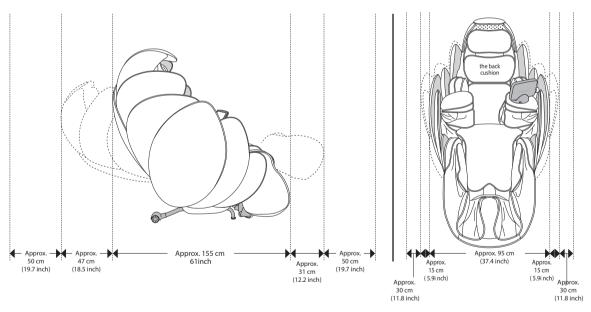

- •To prevent the floor surface from being damaged and to reduce the sound made during work, place a mat or the like beneath the product. (Do not place a hot carpet.)
- •This product is heavy. Therefore, pay attention not to damage the floor surface when putting down the product.
- •Keep this product at least one meter away from AV devices such as a TV set or radio. Failure to follow this instruction may cause noise to interfere with the product.
- •When person weighing 100kg (220 lbs.) sits on the product, a load of about 3.0kg/1cm2 is applied to the floor surface when using the caster stoppers.



- •Do not use this product in a humid location such as bath room or sauna.
- •Install and use the product on a level floor surface.
- •Do not use the product in a dusty location or a location with a high ambient temperature (40°C 104°F or higher).
- •Do not install the product in a location subject to direct heat radiation, such as direct sunlight or a stove, that may heat the product to a high temperature.

# How to carry in and relocate product


#### Relocating the product after its installation


When relocating the product, turn off the main power switch, disconnect the power plug from the receptacle, and also disconnect the connector of the power cable from the inlet.

The weight of the main unit is about 103 kg (227 lbs.). Therefore, move it very carefully.

The minimum dimension of the main unit is 69 cm (27.1 inch). (when using a moving strap.)

#### Remove the main unit and top panel from the box with the help of three people.

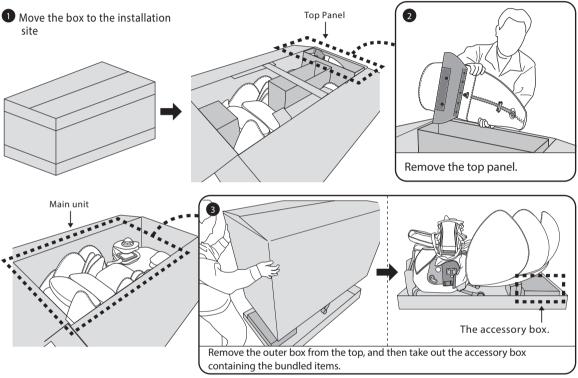


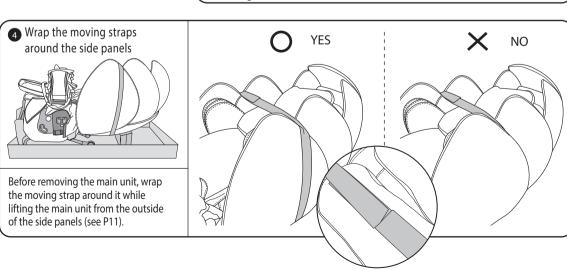

### How to carry in and relocate product


5 Place the main body at the installation site

Move the main unit by holding the front leg part and handle near the speaker at the top part of the main unit.

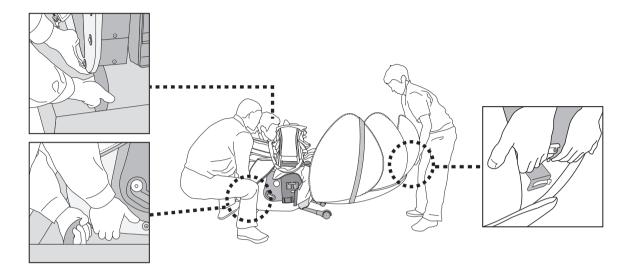

#### Carry the product using two people

Move the main unit by holding the front leg part and handle near the speaker at the top part of the main unit.

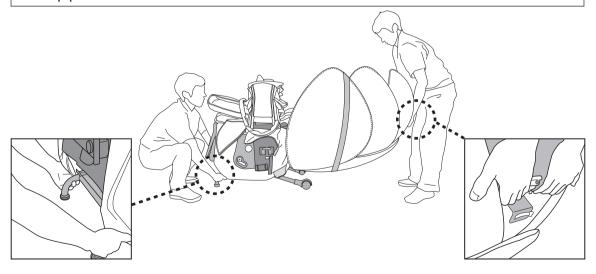



•Do not carry the product with a person sitting on it.

■Before carrying the product, disconnect the power cord from the receptacle, and disconnect the power cable connector from the inlet.
 → Failure to follow this instruction may damage the power cable, possibly causing


fire or electric shock.

### How to carry in and relocate product

#### When taking the stairs,


it should be done by three people

Move the main unit by holding the front leg part and handle near the speaker at the top part of the main

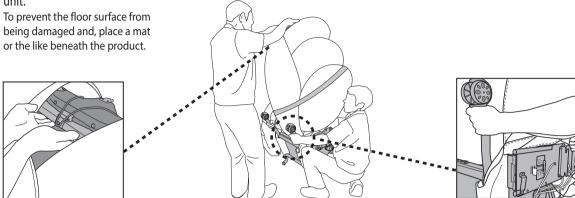

- •The passage width should be more than 80 cm (31.4 inch) if not using moving strap and more than 70 cm (27.5 inch) if a moving strap is used.
- •The minimum dimension of the main unit is 69 cm (27.1 inch). (when using a moving strap.)
- •As the product is heavy, wear gloves for carrying so as not to drop the product or get injured.
- •As the product is heavy, pay attention not to cause lower back pain during carrying in and transfer.
- •Dropping the product may damage the floor or injure you. Therefore, securely hold the product.

### Mounting footrest

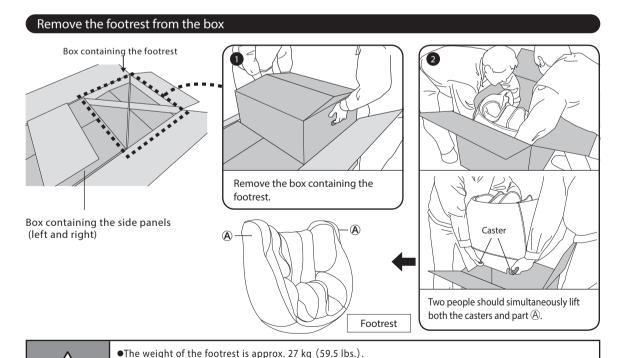


As the product is heavy, wear gloves for carrying so as not to drop the product or get injured.
As the product is heavy, pay attention not to cause lower back pain during carrying in and transfer.

•Dropping this product may damage the floor or injure you. Therefore, securely hold the product.


CAUTION


#### Mounting footrest

#### Connecting the connector and air Hose

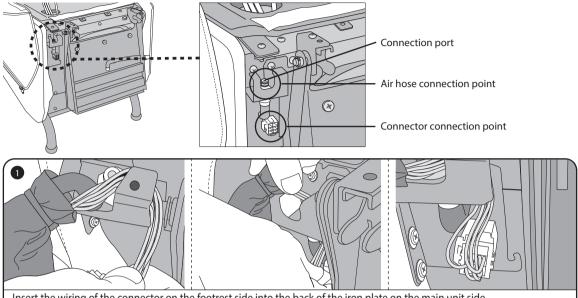

Insert the wiring of the connector on the footrest side into the back of the iron plate on the main unit side, and push it in until clicks into the place.







While setting the footrest connection cover, connect the air hose.




Pass the air hose through the notch (top) of the footrest connection cover from below. Hook the notch (bottom) of the footrest connection cover onto (B) on the main unit side, and push the tip of the air hose into the connection port by using your left index finger. Ensure the air hose is fully inserted.




- •Before dismounting or mounting the footrest, confirm that the main power switch is turned "OFF", and then disconnect the power cable from the receptacle while also disconnecting the connector of the power cord from the inlet.
- → Failure to follow this instruction may damage the power cable, possibly causing fire or finger pinched.
- •When dismounting and mounting the footrest, pay attention not to get your hand or finger pinched between the main unit and footrest.
- ●Positively insert the connector all the way to the back. Securely tighten the mounting screws as well. →Failure to follow this instruction may cause an accident, injury or malfunction to occur.

### Mounting footrest

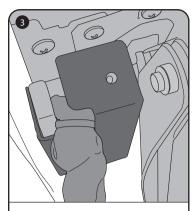

Align the screw holes of the footrest connection cover with those on the main unit.

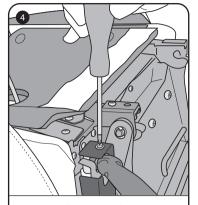


Use a Phillips screwdriver to tighten the screws on the footrest connection cover.




- •Ensure that no wires are pinched when attaching the footrest connection cover.
- •Ensure that the tip of the air hose is inserted into the connection joint.


#### Mounting the Footrest to the Main Body

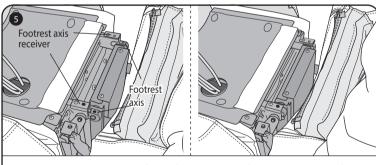

With the thread holes of the footrest axis facing upward, lift the footrest and set the footrest axis receivers of the main unit.

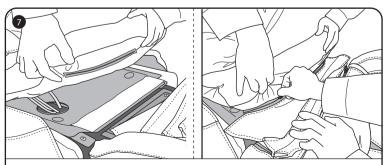

Lift the seat. Align the zipper at the upper end of the footrest cover with the main unit, and close the zipper.

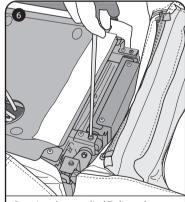

By using the supplied T-shaped wrench, securely fasten the footrest with the footrest mounting screws.


### Mounting footrest



When dismounting the footrest, follow the above steps in the reverse order.


#### How to adjust the Legs


The height of only front legs can be adjusted on the left and right sides. The adjustable height is approx. 1 cm (0.4 inch). When adjusting, keep the front legs up and adjust the height. Be careful not to get your fingers caught when adjusting the chair height.

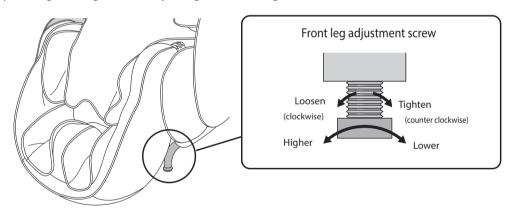



### Mounting top panel

#### Mounting the top panel.

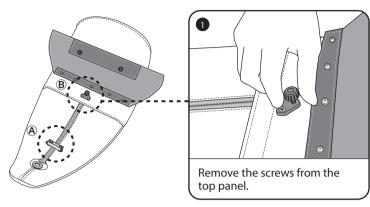


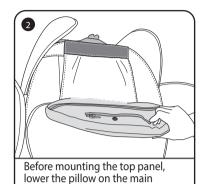


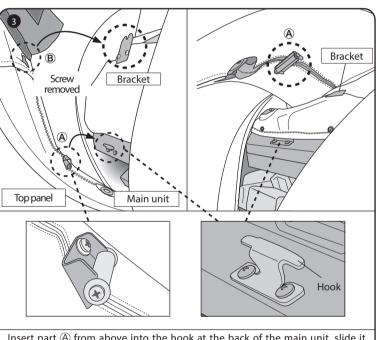


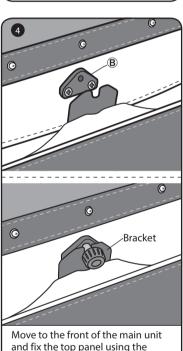

### Mounting top panel

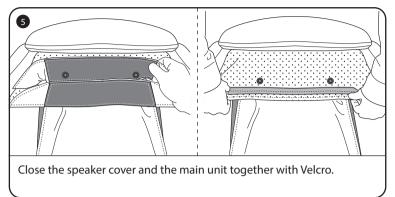

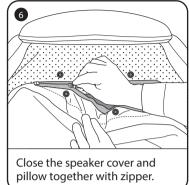

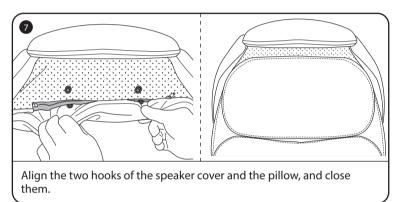


When dismounting the top panel, follow the above steps in the reverse order.




•Be careful not to drop screws when securing them with screws.


#### Names of Parts of the Side Panels

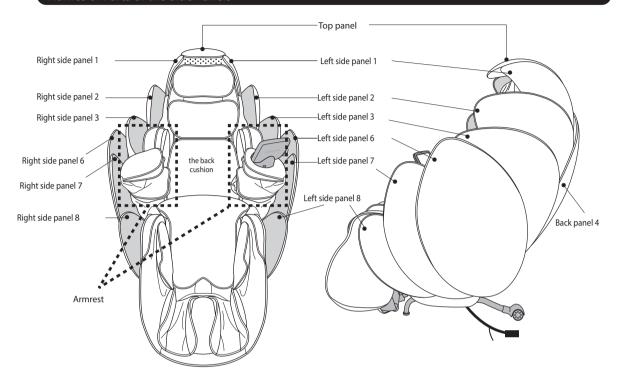


#### Remove the side panels from the box.

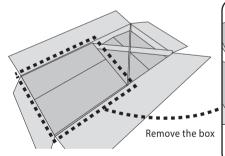




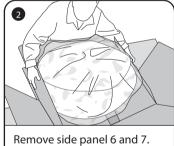

The box containing the side panels includes "Left Side Panel 6, Left Side Panel 7, Left Side Panel 8" and "Right Side Panel 6, Right Side Panel 7, Right Side Panel 8" each wrapped together in the box. Remove the wrap.

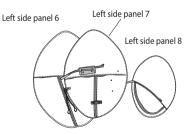


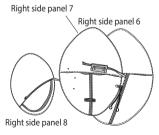




• Be careful when using the box cutter or scissors to avoid personal injury or scratch the surface of the panels.


#### Mounting the left side panels

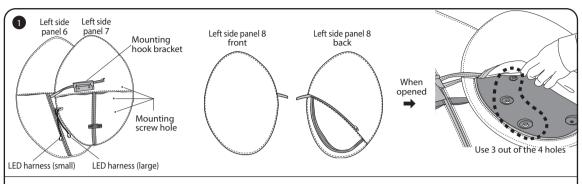



Turn the left side panel 8 to the backside, open the zipper, and attach left side panel 8 to left side panel 6 and 7.

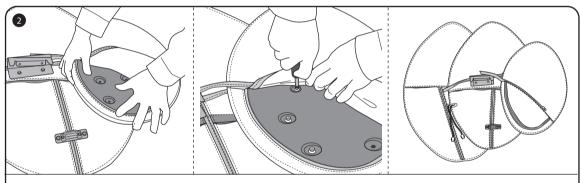


Align the holes (three places) in left side panel 7 with the holes (three places) in left side panel 8, and use your Phillips screwdriver to secure the side panel mounting screws. After securing, close the zipper on left side panel 8.

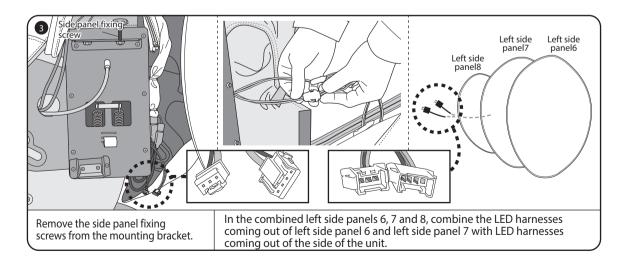


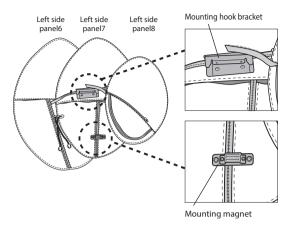

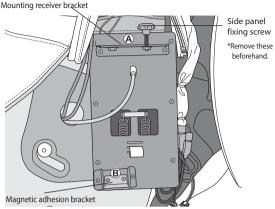


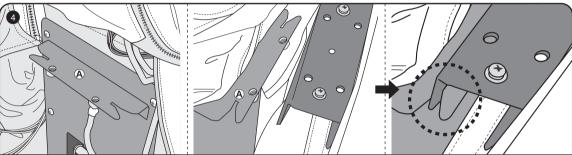

Attach the combined left side panels 6, 7, and 8 to the left side panel mounting receiver bracket (A) by hooking them onto the mounting hook bracket.

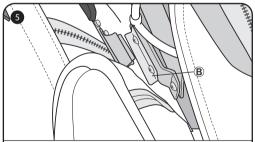

By using the side panel mounting magnet, secure the assembled Left Side Panels 6, 7, and 8 which has been fixed by the side panel mounting screw. (It is more efficient to push out the armrest manually to the outside before attaching, see P11 for reference.)

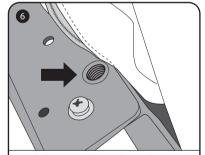

Lightly re-tighten the side panel mounting screw which as removed in Step 3. Recommended tightening torque: 1.1




•Before dismounting or mounting the side panels, confirm that the main power switch is turned "OFF" ,and then disconnect the power cable from the receptacle, and also disconnect the connector of the power cable from the inlet.
→Failure to follow this instruction may damage the power cable, possibly causing fire or electric

- •When dismounting and mounting the side panels, pay attention not to have your hand or finger pinched between the main unit and the armrest.
- •During mounting work, positively insert the connector all the way to the back. Securely tighten the mounting screws as well.

Failure to follow this instruction may cause a failure.

•Wear work gloves to prevent injuries while at work.

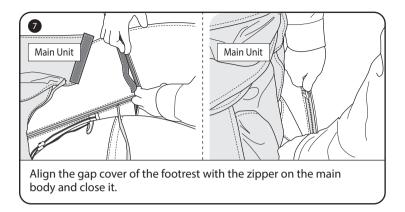


When dismounting the side panels, follow the above steps in the reverse order.


#### Mounting right side panel

Follow the same steps as for mounting the left side panel.

### Attaching monitor

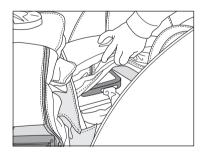

The remote control is located under the back cushion. Please remove it.

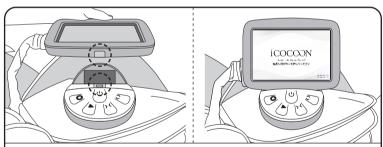

Remove the monitor and attach it to the main unit remote control (it attaches with magnets).




- •Be careful not to drop the monitor when attaching or detaching it.
- •Ensure the cable does not get caught in the side panel or other parts.

### Connecting the power cable


• Be sure to use the power cable comes with this product.

#### Turning on the power

①Insert the connector of the power cable to the inlet located at the rear of the main unit, and insert the power plug to the receptacle.

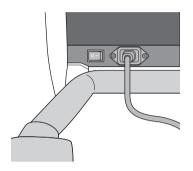

②Turn "ON" the main power switch located at the rear of the main unit. At this point, characters are displayed on the monitor, and the logo LED on the top panel will light up.

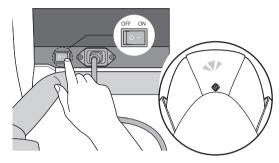

- It may take about one minute for the monitor screen to be displayed.
- \*If the backrest is in a reclined state (or if the backrest is reclined, or the footrest is raised), the backrest will automatically return to its upright position.
- \*If the mechanisms are stopped at intermediate position, turning "ON" the main power switch will cause them to move their housing positions and stop.

  (back mechanism... lower part of the backrest, sole mechanism... open state).




- •Do not use this product by using a transformer.
- →Failure to follow this instruction may cause a failure of this product or an electric shock.



- Before inserting the power plug to the receptacle, confirm that the main power switch is set to "OFF".
- •Positively insert the power plug and the connector all the way to the back.

# Placing the caster stopper

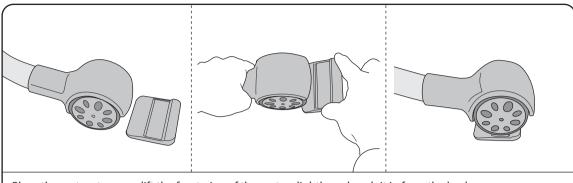

Place the caster stoppers, lift the front pipe of the caster slightly and push it in from the back.



Placing and displacing the caster stoppers, make sure that the backrest is in the upright position.
Be careful not to pinch your fingers during placing and displacing.

### Points to check after installation

The following are the final check points to be checked after the unpacking and installation work. Check the check-boxes for the items you have checked.

the check-boxes for the items you have checked.			
1.Mounting of footrest  Confirm that the zipper is positively closed to the end.	Mounting  Zipper	2.Mounting of top panel  Back side  Front side	Check
3.Mounting of side panels	Check	4.Insertion of the power cord	Check
	Right	Confirm that the power cable is fully inserted into the inlet on the main unit.	
5.Attachment of monitor	Check	6.Speaker operation check (audio)	Check
icoccon galacteristics of the second of the	Stand Operation check	speaker (built-in)	Audio
7.Placing caster stoppers	Check	8.Check the bundled items after installation	
		After installing the product, confirm that the following bundled items are present.  Safety precautions  T-shaped wrench	

# MEMO



#### https://www.family-chair.co.jp

Headquarters: 4-2-10 Miyahara, Yodogawa-ku, Osaka City, Osaka

Manufacturer/seller: Family Inada Co., Ltd. (Daisen Factory): 1220 Takata, Daisen-cho, Saihaku-gun, Tottori

\*The product specifications (including tablet display design) may be subject to partial change for product improvement without prior notice.